

## Installing the rotating knob:

First remove the latch assembly if it's already installed to expose the latch pocket.

Do this by pushing in on the button located on the inside front of the container and pulling up on the latch assembly.

Insert the rotating knob into the hole provided in the front of the container from inside the latch pocket.

Once the knob is in place lightly pull out on the knob and rotate clockwise until it stops. It should be in the position shown.

While holding the knob in this position re-install the latch assembly into the pocket.


The forked lever on the latch assembly should engage with the headed stud on the rotating knob when fully installed.

Rotate the knob counter clockwise to the stop and the hook on the latch assembly will open if installed correctly.

### Note:


Before re-installing the latch assembly make sure the button that was pushed in to remove the latch assembly is in place otherwise the latch assembly may not be retained in the pocket securely.

Latch assembly

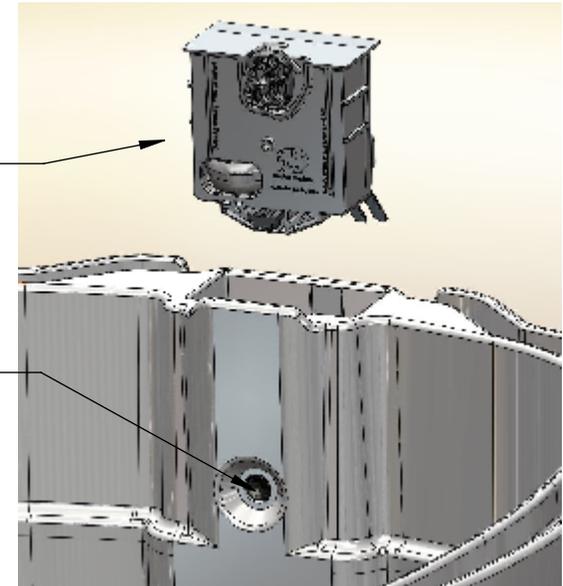

Push in on this button and lift out latch assm.

Forked lever will fit over the headed stud when installed correctly.

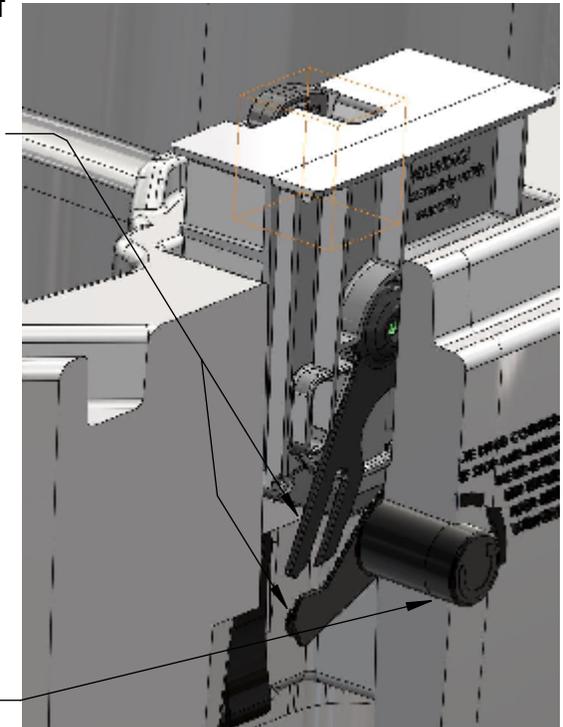

Knob inserted into the hole in front of the container