



Bearicuda VarmintVault - VAR233

Assembly Instructions

Lids: Containers are shipped with the lids completely attached and assembled. However when the need to attach a lid does arise, it will be very easy to accomplish. To assemble the lid, place the lid on top of the container, lining up the two (2) extended pieces of plastic from the lid into the handle area. Then place the hinge pins into the side holes on each side of the handle area making sure the hinge pins pass through the extended piece of plastic from the lid. Finally, push the hinge pins into place using a fair amount of pressure with either your hand or rubber mallet.

Nestable Catch Bar: Carts are shipped with Nestable Catch Bar pre-installed. However when the need arises, simply push metal bar to snap in.

Axle and Wheels: Our containers are shipped in stacks of (9) high with the bottom cart of each stack fully assembled (lids, axles and wheels). All other containers have the axles and wheels with integrated spacers conveniently placed in the bottom of each individual container. To assemble the axle assembly, first slide the axle through all four holes in the axle housing until there is an equal amount of axle space extending beyond the end of the axle housing. Finally, place the wheel onto the axle until it “snaps” firmly into the groove on the axle. It’s that easy!

The average wheel assembly time utilizing our integrated spacer snap on wheel is 8 to 10 seconds!

ROLL OUT CART ASSEMBLY

