


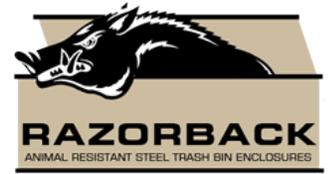

Razorback Bear Guard Brackets – Full Side

INSTALLATION INSTRUCTIONS



Most customers will install the Bear Guard Brackets during the assembly of their new Razorback. If you have already assembled your Razorback it will be necessary to remove the four corner brackets from the bin (you may also need to loosen the 4 carriage bolts that connect the side panels to the front/rear panels to give more flex when inserting the bolts into the Bear Guard Brackets). After their removal, proceed with the instructions below.



Image 1

1. Place two 1/4" x 1" carriage bolts into two centre holes of one of the Bear Guard Brackets. (See Image 1)

2. Holding the carriage bolts in place, lift the Bear Guard Bracket and slide it over one end of your Razorback, from the side you are installing the Bear Guard. Line up the carriage bolts with the corresponding holes near the top rim of the bin. (See Image 2) Place a washer and NyLock nut on each bolt. (See Image 3) **DO NOT TIGHTEN THE NUTS!**

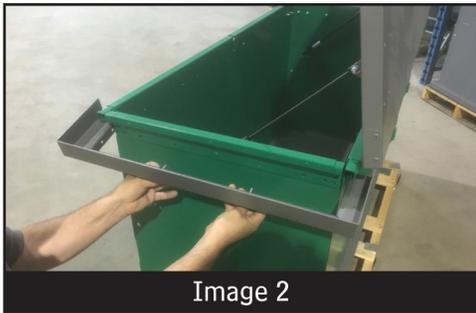


Image 2



Image 3

3. Slide a corner bracket between the BearGuard and the front corner of the Razorback (See Image 4). One at a time, insert the four 1/4" x 1" carriage bolts through the Bear Guard, the corner bracket and the Razorback (See Image 5) and put washer and NyLock on each bolt. **DO NOT TIGHTEN THE NUTS!**

Note: The bolts may be a little snug going through all of these parts. Just wiggle the bolts as you insert, and they will fit. Repeat this to install the rear corner bracket.



Image 4



Image 5

4. To install the 2nd Bear Guard Bracket, just repeat the same process.

5. Tighten the nuts on each of the bolts snugly. Your Bear Guard Brackets are now installed.

Congratulations on your choice to purchase the Razorback Bear Guard Brackets- Full Sides! Using these Bear Guard Brackets is what will really make the difference in keeping larger bears (including Grizzly, Kodiak, and Polar Bears) out of your new Razorback.

When Razorback was tested and certified as Grizzly Bear Resistant, these brackets were used.

TOOLS REQUIRED

A 7/16" socket, with a cordless drill or ratchet is all that is required.

PARTS INCLUDED

2 Bear Guard Brackets

1/4" x 1" Carriage Bolts (20 pcs.)

1/4" NyLock Nuts (20 pcs.)

1/4" Flat Washers (20 pcs.)

THANK YOU FOR CHOOSING RAZORBACK!

We hope that the installation of the Bear Guard Brackets is straight forward to complete, but if you need to reach us for some help with assembly, or for any other questions or comments, call 877-232-7428 or e-mail info@bearicuda.com

BEARICUDA.COM